
 

 


## Front Laser Mount


### 1.0: Parts List

- Ball mount (Qty. 1)  
- Long faceplate screw (Qty. 1)  
- Flat washer (Qty. 3)
- M4 x 18 mm socket head cap screw (Qty. 1)

### 2.0: Installation

Step 1: Choose where the laser mount will be installed.

- 1) If the machine is equipped with an LED light assembly and you would like to install the mount on it, use the provided M4 socket head cap screw and install as illustrated below.

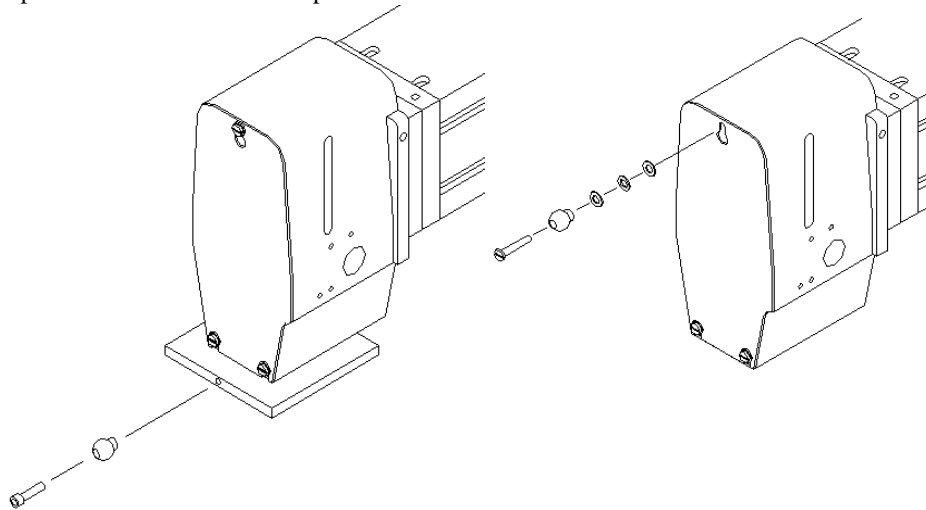

- 2) If you would like to install the mount onto the face plate, select the screw the laser mount will be installed on. **NOTE: FOR ILLUSTRATION PURPOSES, THE INSTRUCTIONS INSTALL THE FRONT LASER MOUNT ON THE UPPER FACE PLATE SCREW.**

Step 2: Remove the desired faceplate screw from the machine.

Step 3: Install the ball mount onto the machine using the supplied long faceplate screw. **NOTE: IF THE MACHINE IS EQUIPPED WITH A PAINTED METAL FACEPLATE, USE THE INCLUDED (3) FLAT WASHERS BETWEEN THE FACEPLATE AND THE BALL MOUNT. FAILURE TO USE THE FLAT WASHERS WILL CAUSE THE BALL MOUNT TO BE LOOSE AND CAN CAUSE POSSIBLE DAMAGE TO THE THREADED HOLE OF THE MACHINE.**

Step 4: Remove the existing laser and laser mount from the side of the machine and install it onto the front laser mount. Position the laser and tighten it securely with the small knob.

