

Needle Low Timing Tool



Step 1: Remove the face plate and needle plate.

Step 2: Using the hand wheel, rotate the needle to its lowest position.

Step 3: Loosen the needle bar clamp screw.

Step 4: Pull the needle bar down far enough to allow you to insert the needle low tool.

Step 5: Lift up forcibly on the needle bar and tighten the needle bar clamp screw.

Step 6: Remove the needle low tool.

Step 7: Re-install the needle plate and face plate.

1)




2)



3)



4)

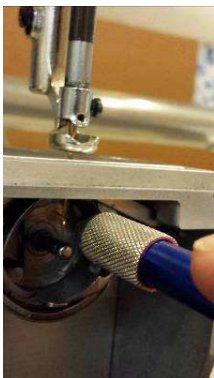

5)



6)



ABM International, Inc.
Model: Innova Longarm Quilting Machine


Series: 1018/1022/1026/1032 V1.0
Needle Low Timing Tool

Your needle low position should look like the image below - showing a little less than ½ an eye.
You can now proceed with timing if needed.

We recommend you to watch the training tutorial at:

<http://www.innovalongarm.com/resources/tutorials/innova-tutorials.html>

Click on Timing the Innova watch the video.

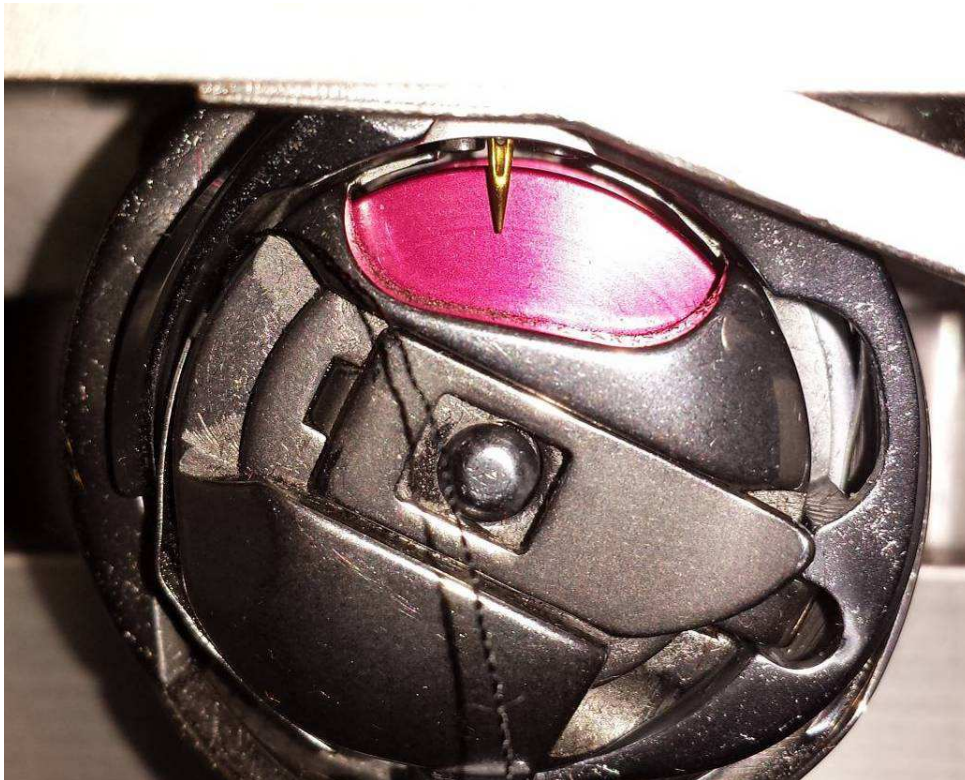

Proprietary information of ABM INTERNATIONAL, Inc. furnished for customer use only.
No other uses are authorized without the prior written permission of
ABM INTERNATIONAL, INC.