

ABM International, Inc.
Innova Open Toe Presser Foot

1.0: Parts List


Open toe presser foot (Qty. 1)



2.0: Open toe presser foot assembly

Step 1: Remove the needle from the machine

Step 2: Remove the presser bar shoulder screw and the presser foot from the presser bar. Clean and lightly oil the shiny metallic end of the presser bar.

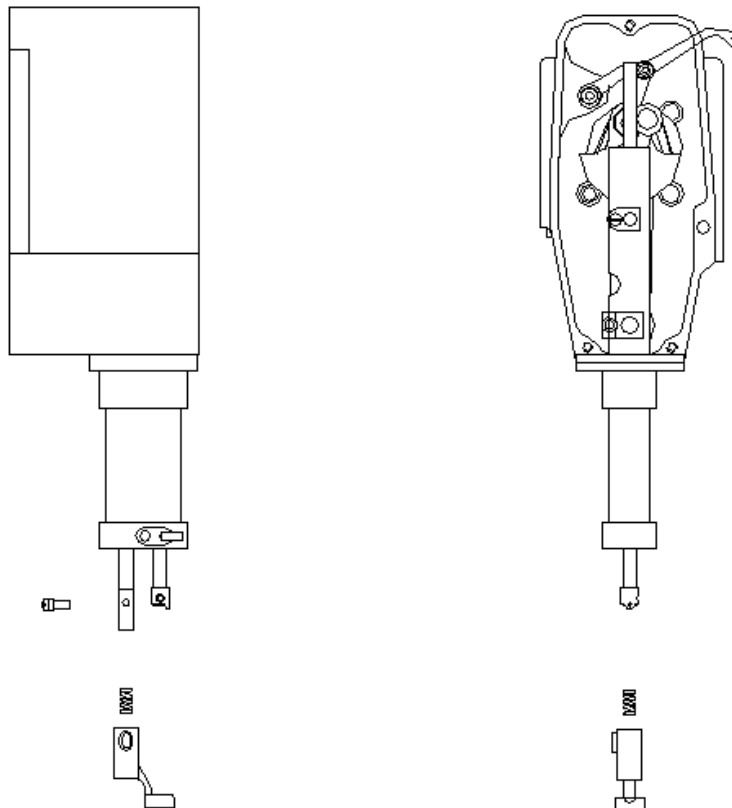

Step 3: Make sure the spring is installed in the hollow end of the presser bar. If the spring fell out of the bar and is inside the original foot, remove the spring from the foot and place it in the end of the presser bar.

Step 4: Install the open toe presser foot with the spring onto the presser bar and carefully re-install the shoulder screw. Lightly oil the area where the shoulder screw comes in contact with the presser foot.

Step 5: Check to ensure the foot compresses and extends freely. NOTE: It will take some effort to compress the spring but the foot should not bind or stick.

Step 6: Clean any excess oil off of the foot and the machine.

Step 7: Re-install the needle in the needle bar.